



MAINTENANCE

Every month: clean leaf-catcher and lid. Every 6months: add a dose of algaecide. Replace filtration cartridges as per product manual. Every 12months: inspect non-return valve, clean gutters and siphon sludge. Every 3yrs: disinfect tank. Every 5yrs: replace non-return valve.

for a reticulation 1 downpipe for diagram. every 45m² of No isol.valve roof area between PRV & geyser PHASE #3 (±R7000) 5KL tank, mesh lid, isol.valve and a 'Do not drink' sign. **SANS 10400** R: 4.3 10252-1: 6.1.3.2 PHASE #4 PHASE #5 (<R11000) (±R9000) Collect more roof area Non-return into additional tanks. valve, 0.7KW pump, sed.filter & isol.valves. SANS 3088 Table 3 SANS 10252-1: 7.1.2 SANS 3088: 4.7.6 SANS 10252-1 Annex D ← Municipal water

Ask a plumber

RAINWATER HARVESTING FOR **NELSON MANDELA BAY RESIDENTS**

architectural consult coza

*Technical data available on request. Suitable for 624mm rain p/a Prepared by Martin Olivier and made freely available. Jun 2021